


**SYMPTOM:
FUEL LEVEL LIGHTS FLASHING
ON COMMUTATOR**

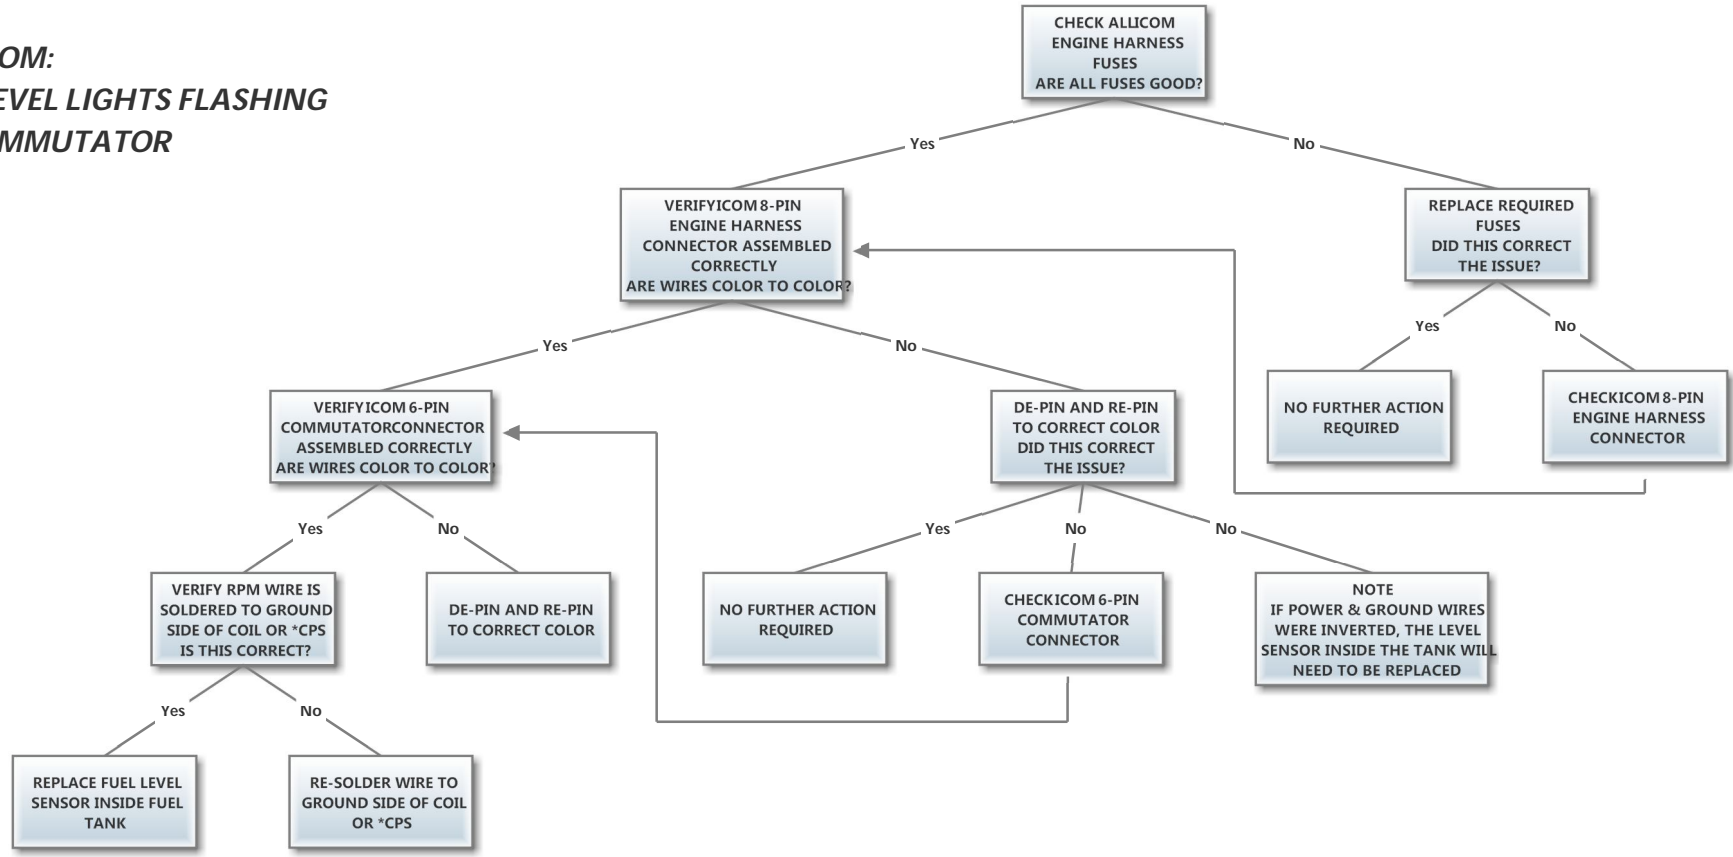

* CPS - CRANKSHAFT POSITION SENSOR