


SYMPTOM:
VEHICLE WILL NOT SWITCH
OVER TO PROPANE
 (ORANGE LIGHT FLASHES ON COMMUTATOR)

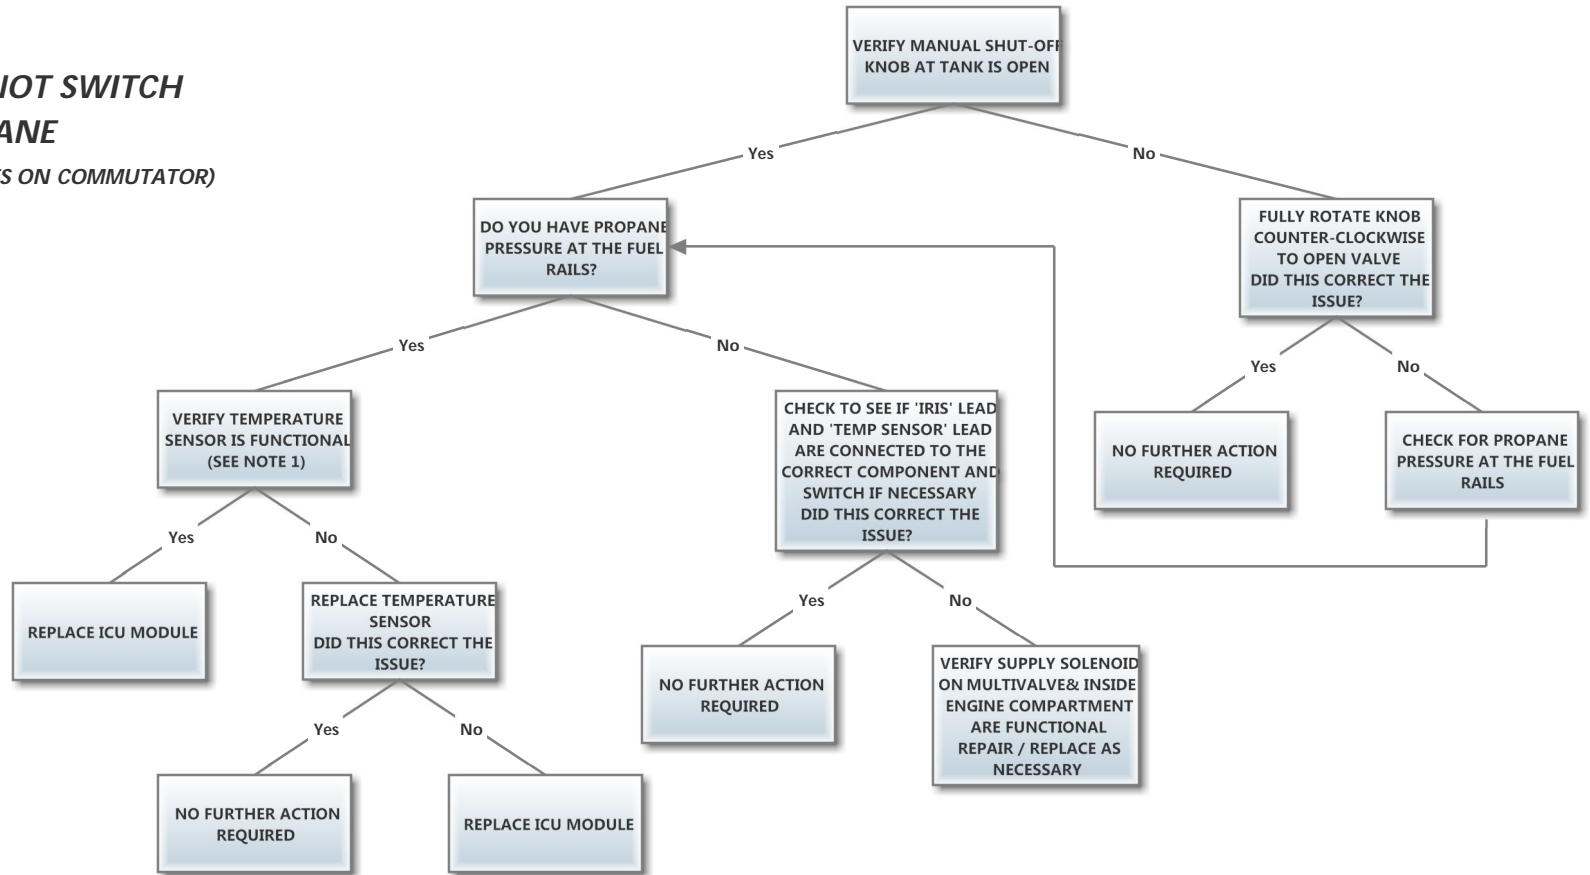

NOTE 1
 VERIFY TEMPERATURE SENSOR FUNCTION
 - UNPLUG TEMP SENSOR LEAD FROM TEMP SENSOR
 - INSTALL JUMPER WIRE INTO TEMP SENSOR LEAD CONNECTOR (BETWEEN THE 2 TERMINALS)
 - START VEHICLE (VERIFY ORANGE LIGHT ON COMMUTATOR IS FLASHING AFTER VEHICLE IS STARTED TO INDICATE PROPANE SYSTEM IS ON)
 - IF THE VEHICLE SWITCHES OVER TO PROPANE AFTER 45 SECONDS THE TEMPERATURE SENSOR IS DEFECTIVE - REPLACE