



Technical Service Bulletin

Reference: ICOM-TSB13-005	Date: 8/14/2013
-------------------------------------	---------------------------

Ford Transit Fuel Fill Hose Clamp

UNITS AFFECTED:

Ford Transits equipped with the 11 x 42 - 11 x 39 fuel tank mounted inside the vehicle.

SERVICE INFORMATION:

Secure the propane fuel fill hose to the floor pan above the rear axle with a 1-3/8" P-Clamp.


PURPOSE:

To avoid potential contact with the passenger side rear stabilizer link.

ACTION:

Review Service Procedure - Attachment 'A'

1. Locate the propane fuel fill hose routed above the passenger side stabilizer link. (Fig. 1)

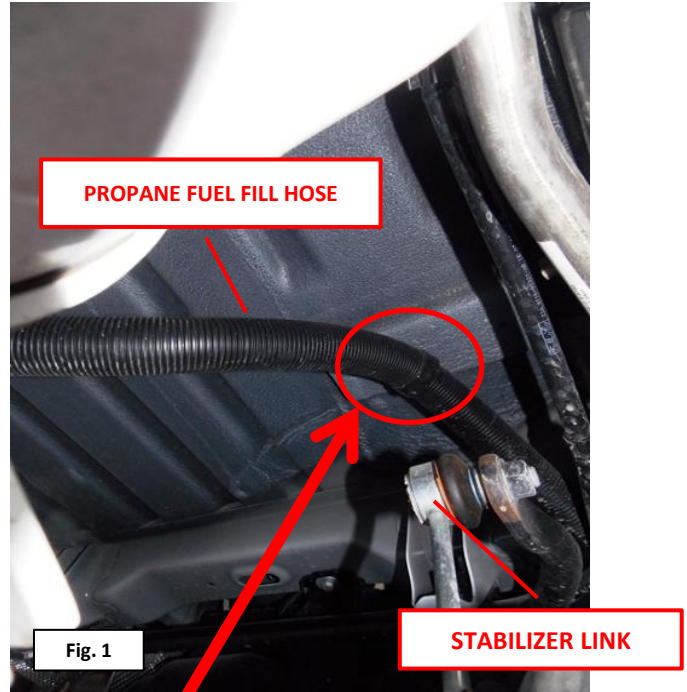

2. Install the 1-3/8" P-Clamp onto the fuel hose and secure the clamp to the floor pan reinforcement as shown. (Fig 2)

